

WAYO

Operating Manual

Version 1: June 2015



Contents

Page	Topic
1	Charging WAYO - overview
2	Charging WAYO - connecting and disconnecting the power cable
3	Moving WAYO - how to move WAYO and where to position it
4	Control Panel - how to turn WAYO on and off
5	Caring for WAYO - cleaning and customer support
6	Emergency Cut-Off Switch - how to shut down WAYO in emergency situations
Appendix	WAYO Troubleshooting Guide

Charging WAYO

WAYO is powered by a re-chargeable battery that is situated in the battery/wheel casing.



WAYO's battery can be charged by connecting the charging cable to the device then plugging the other end into a power point.



After 6 continuous hours of charging WAYO will run for up to 14 hours using only its internal battery.

Once charged, WAYO can operate without the need for it to be plugged into mains power.



You can also run the WAYO when it is plugged into an external power source.



Charging WAYO

To connect the power cable, insert the connector plug into the power port.




Push the connector in, and twist clockwise one quarter of a turn to lock the connector in place.



Check to ensure that the cable is securely connected and that the device is charging.



Once your WAYO has been charged, remove the power cable by sliding the thumb lock on top of the connector plug back away from the device

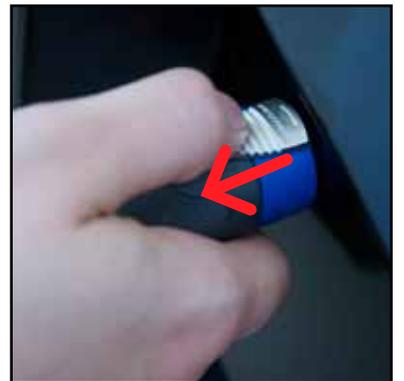

Twist the connector plug anti-clockwise one quarter of a turn and carefully pull it out.



Your WAYO is now charged and free to be moved into position.



Moving WAYO

Before moving your WAYO into position, check that it has been unplugged from the external power source.



To move your WAYO, hold the handle on the back of the device...



...and tilt the device downwards so that the wheels can move freely.



Wheel the device into position by pulling it to your desired location.



You should place your WAYO in a location that provides protection from extreme weather and direct sunlight, indoors or outdoors.



Control Panel

WAYO's control panel is located at the rear of the device directly behind the handle.



The control panel is where you turn your WAYO on and off, and where you can read the battery life status and its serial number.

To turn WAYO on, press the power button.



The power button will light up blue when your WAYO is powered on.



To turn off your WAYO, hold the power button for three seconds.



The power button will light up red when your WAYO is powered off.



Caring for your WAYO

The body and screen of your WAYO can be cleaned using a soft, clean damp cloth.

Glass cleaner liquids can also be used to clean the screen.



If you need support in using your WAYO please phone 1300 GO WAYO/1300 469296 .

This number is located on a sticker at the back of the unit.



When calling for support you will need to tell us your WAYO's serial number.

This number is located on a sticker at the back of the unit's battery and wheel casing. You can also find the serial number from the information screen of your Control Panel.



Emergency Cut-Off Switch

In the event that you need to turn off your WAYO immediately or in an emergency situation, use the emergency power cut-off switch. If the switch is 'off' it means the WAYO will receive battery power and be operational. To cut the battery power instantly you need to turn the emergency switch 'on'.

WAYO's emergency cut-off switch is located underneath the battery housing, near the wheels on the left hand side of the device.



If your WAYO's emergency cut-off switch is 'on' it will look like this and the position of the switch will be towards the rear of the WAYO.



If your WAYO's emergency cut-off switch is 'off' it will look like this and the position of the switch will be towards the front of the WAYO.





WAYO

253 Leitchs Road, Brendale QLD 4500 Australia

Ph: 1300 GOWAYO/1300 469 296 or +61 (7) 3205 8450

Email: info@wayo.co

Web: www.wayo.co